# ASSEMBLY INSTRUCTIONS for Full Bed Conversion Kit CASCADE 4 IN 1 CONVERTIBLE CRIB Model #48088





"RECOMMENDATION: We recommend the use of a Bunkie Board or box spring under a mattress for this conversion kit.


# Thank you for your purchase!


Remove all parts and hardware from the box and lay on a carpeted or scratch -free work surface.

Do not dispose of any contents until assembly is completed.

Familiarize yourself with all exhibits and diagrams to facilitate the assembly of your crib.

# **TOOLS REQUIRED:**

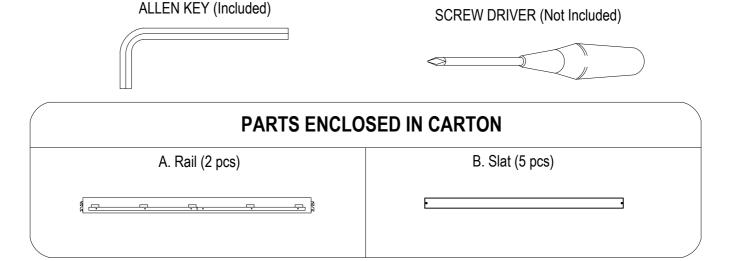

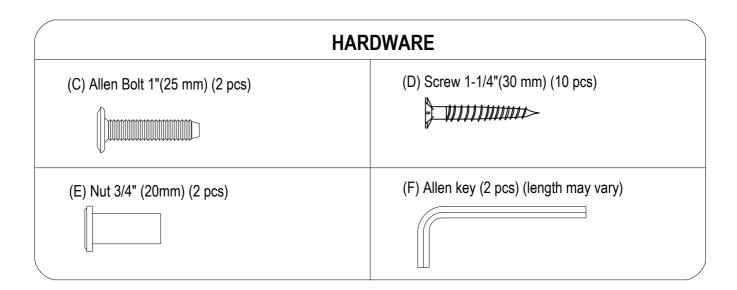

Do not fully tighten all bolts until all parts are in place. (please add an extra 1/2 revolution to the bolts when using spring washer after tightening)


# STEP 1 " ASSEMBLY OF HEADBOARD AND FOOTBOARD"

# THIS STEP REQUIRES:

Headboard (1 pc)

Footboard (1 pcs)

(2 pcs) A. Rail

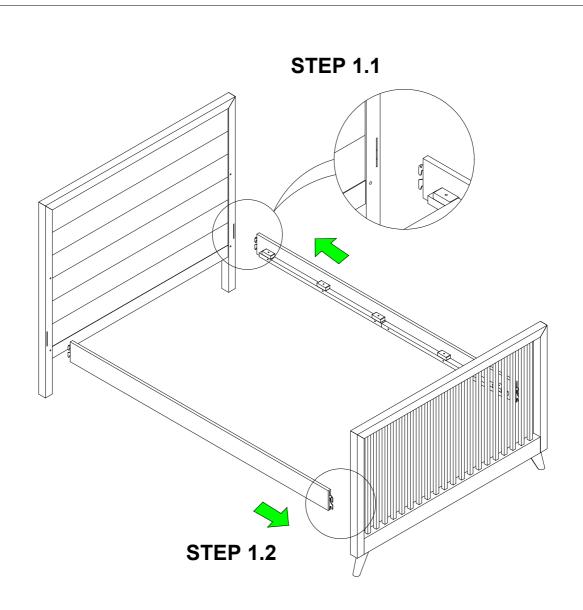

STEP 1.1:
Place Headboard in vertical position and then hook rails (A) to Headboard.

# **STEP 1.2:**

Place Footboard in vertical position and then hook rails (A) to Footboard

# STEP 2 " ASSEMBLY OF SLATS"

THIS STEP REQUIRES:


F. Allen key (2 pcs)

SCREW DRIVER (Not Included)

B. Slat

(5 pcs)






C. Allen Bolt 1"(25 mm) (2 pcs)


D. Screw 1 1/4"(30 mm) (10 pcs)

E. Nut 3/4" (20mm) (2 pcs)







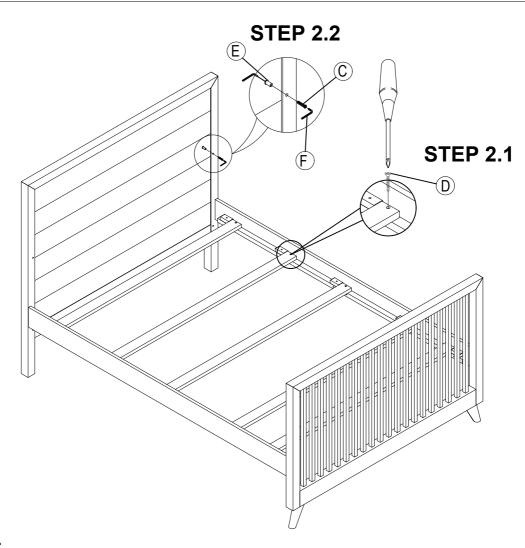

# **STEP 2.1:**

- After attaching Rails (A) to headboard and footboard, place Slat (B) on the support strip of Rail (A), fasten both ends of Slat (B) with screw (D).
- Tighten all Screws with Screw Driver (not included).

## **STEP 2.2:**

- Insert Allen bolt 1" (25 mm) (C), through the top hole in the headboard from the inside and connect with nut 3/4" (20 mm) (E).
- Tignten all bolts and nuts with Allen key (F). Assembly complete. Thanks you!